


The choice of a specific product will depend on the applied chemical and mechanical stress. For further information, please contact the Vandex International Ltd. Technical Department

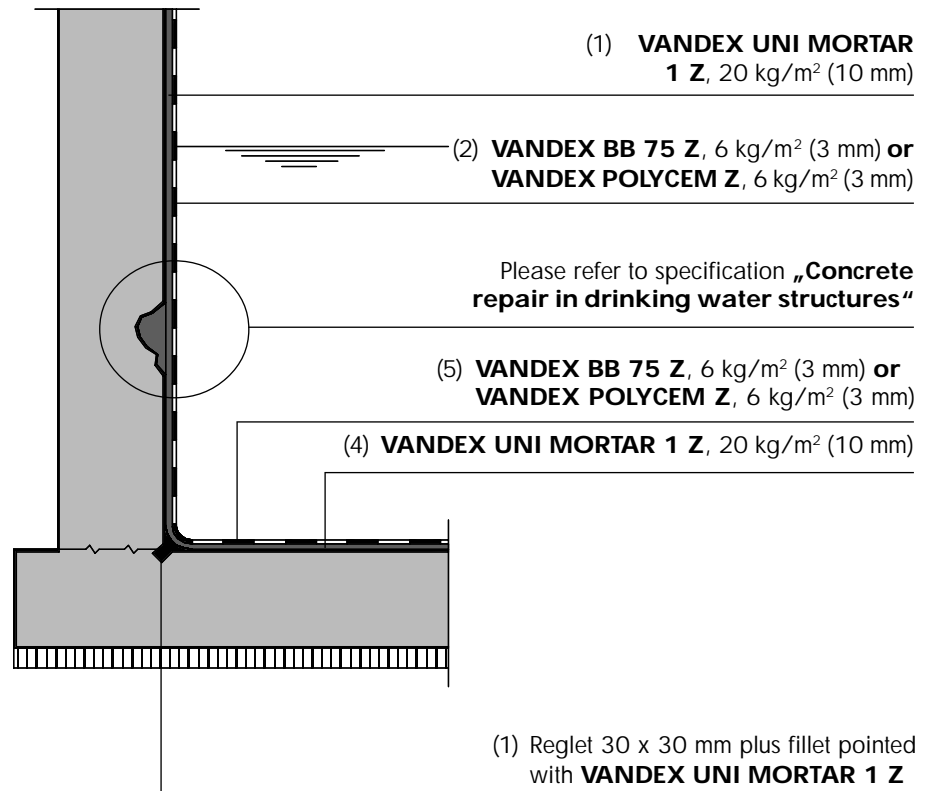

Application Instructions:

- 1.) Chase out a reglet approx. 30 x 30 mm along the construction joints. Point the reglet and form a fillet with VANDEX UNI MORTAR 1 Z.
- 2.) Vertical surfaces:
Apply in one coat VANDEX UNI MORTAR 1 Z, 20 kg/m² (10 mm), as a levelling mortar and to increase the concrete cover to the reinforcement.
- 3.) Finally, apply two coats of VANDEX BB 75 Z or VANDEX POLYCEM Z, at the total rate of 6 kg/m² (3 mm).
- 4.) Horizontal surfaces:
Apply one coat of VANDEX UNI MORTAR 1 Z, at the rate of 20 kg/m² (10 mm) as a levelling mortar and to increase the concrete cover to the reinforcement.
- 5.) Finally apply two coats of VANDEX BB 75 Z or VANDEX POLYCEM Z, at the total rate of 6 kg/m² (3 mm).

The information contained herein is based on our longterm experience and the best of our knowledge. We can, however, make no guarantee since for a successful outcome, all circumstances in an individual case must be taken into consideration. Indications of quantities required are only averages which in certain cases might be greater.