


The choice of a specific product will depend on the applied chemical and mechanical stress.  
For further information, please contact the Vandex International Ltd. Technical Department

Constructed in masonry or concrete

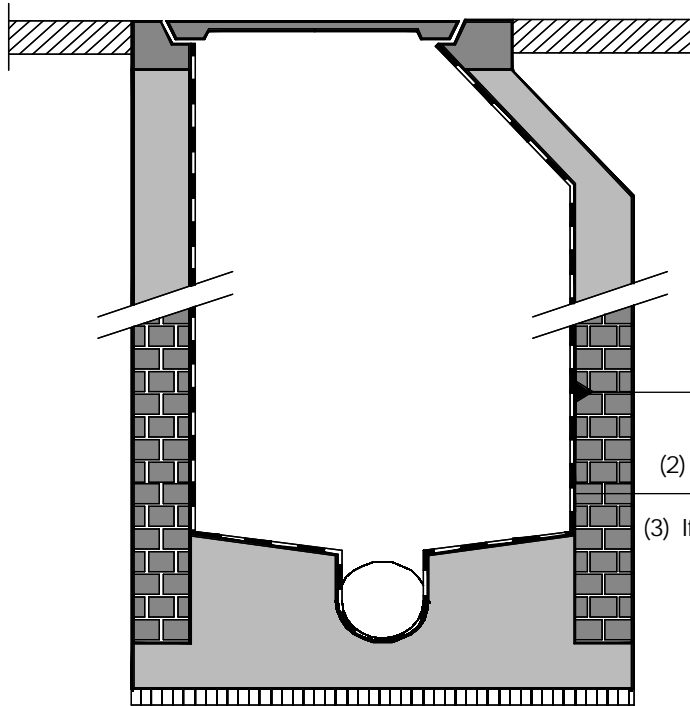

(1) Stop water leaks in accordance with specification „**Plugging water leaks**“

(2) **VANDEX UNI MORTAR 1 Z**, 20 kg/m<sup>2</sup> (10 mm)

(3) If necessary **VANDEX POLYCEM Z**, 6 kg/m<sup>2</sup> (3 mm)

### Application Instructions:

- 1.) Stop water leaks in accordance with the specification „Plugging water leaks“.
- 2.) Apply one coat of VANDEX UNI MORTAR 1 Z, at the rate of 20 kg/m<sup>2</sup> (10 mm) to the internal surfaces.
- 3.) If necessary, apply two coats of VANDEX POLYCEM Z, at the total rate of 6 kg/m<sup>2</sup> (3 mm).

The information contained herein is based on our longterm experience and the best of our knowledge. We can, however, make no guarantee since for a successful outcome, all circumstances in an individual case must be taken into consideration. Indications of quantities required are only averages which in certain cases might be greater.